


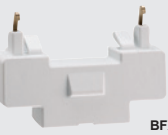





	type	description		for contactor
<b>Accessories for contactors BF09 - 110</b>				
 <p>BFX3101</p>  <p>BFX80</p>  <p>BA135</p>  <p>BFX8901</p>  <p>BFX77...</p>  <p>BFX...</p>  <p>G...</p>	<b>BFX3101</b>	reversing contactor rigid connecting kit	for contactors	BF09 - 25
	<b>BFX3102</b>	reversing contactor connecting kit	for BFX5001	BF09 - 25
	<b>BFX3201</b>	reversing contactor rigid connecting kit	for contactors	BF26 - 38
	<b>BFX3131</b>	line-star-delta rigid connecting kit	for contactors	BF09 - 25
	<b>BFX3231</b>	line-star-delta rigid connecting kit	for contactors	BF26 - 38
	<b>BFX3232</b>	line-star-delta rigid connecting kit	(line-delta) BF26 - 38	BF09 - 25
	<b>BFX80</b>	sealing cover	for contactors	BF09 - 38
	<b>BFX8901</b>	universal screw mounting base	for contactors	BF09 - 38
	<b>BFX8902</b>	screw fixing brackets (2 pcs)	for contactors	BF09 - 38
	<b>BA135</b>	2-pole paralleling links	for contactors	BF09 - 25
<b>BA235</b>	2-pole paralleling links	for contactors	BF26 - 38	
<b>BA435</b>	3-pole paralleling links	for contactors	BF95 - 110	
<b>G231</b>	1-pole enlarged terminal (1-6 mm <sup>2</sup> )	for contactors	BF09 - 25	
<b>G232</b>	1-pole enlarged terminal (1-10 mm <sup>2</sup> )	for contactors	BF26 - 38	
<b>G271</b>	3-pole enlarged terminal (1-50 mm <sup>2</sup> )	for contactors	BF95 - 110	
<b>G285</b>	1-pole auxiliary terminal	for contactors	BF95 - 110	
<b>BFX30</b>	blank label for self labelling (orange)	for contactors	BF09 - 80	
<b>Accessories for contactors B115 - B630</b>				
<b>BA1595</b>	3-pole star connecting bar	for contactors	B115 - B180	
<b>BA1721</b>	3-pole star connection bar	for contactors	B250 - B400	
<b>BA1846</b>	3-pole star connection bar	for contactors	B500 - B630	
<b>G371</b>	adaptor for fast-on to screw terminal (coil)		B115 - B630	
<b>Surge suppressors for contactors BF09 - 80A (quick connect)</b>				
<b>BFX77048</b>	≤ 48 VAC	varistor	for contactors	BF09 - 80A
<b>BFX77125</b>	48 - 125 VAC	varistor	for contactors	BF09 - 80A
<b>BFX77240</b>	125 - 240 VAC	varistor	for contactors	BF09 - 80A
<b>BFX79415</b>	240 - 415 VAC	resistor-capacitor	for contactors	BF09 - 80A
<b>Spare coils</b>				
<b>BFX91A/...*</b>	AC	spare coil only	for contactors	BF09 - 25
<b>BFX92A/...*</b>	AC	spare coil only	for contactors	BF26 - 38
<b>BFX93A/...*</b>	AC	spare coil only	for contactors	BF40 - 80A
<b>BFX93E/...*</b>	AC/DC	spare coil only	for contactors	BF40 - 80E
<b>BA705/...*</b>	AC	spare coil only	for contactors	BF95 - 110
<b>BA911/...*</b>	DC	spare coil only	for contactors	BF95 - 110
<b>BA1546/...*</b>	AC/DC	spare coil only	for contactors	B115 - B180
<b>BA1671/...*</b>	AC/DC	spare coil only	for contactors	B250 - B400
<b>BA1796/...*</b>	AC/DC	spare coil only	for contactors	B500 - B630
<i>1...* Specify coil voltage 012/024/048/110/230/400V – add to part number</i>				
<b>Spare contact sets (fixed and moving) per three-pole set</b>				
<b>BFX99040T</b>	3-pole main contact replacement set	(fixed and moving)		BF40
<b>BFX99050T</b>	3-pole main contact replacement set	(fixed and moving)		BF50
<b>BFX99065T</b>	3-pole main contact replacement set	(fixed and moving)		BF65
<b>BFX99080T</b>	3-pole main contact replacement set	(fixed and moving)		BF80
<b>G475</b>	3-pole main contact replacement set	(fixed and moving)		BF95
<b>G476</b>	3-pole main contact replacement set	(fixed and moving)		BF110
<b>G380</b>	3-pole main contact replacement set	(fixed and moving)		B115
<b>G381</b>	3-pole main contact replacement set	(fixed and moving)		B145
<b>G382</b>	3-pole main contact replacement set	(fixed and moving)		B180
<b>G383</b>	3-pole main contact replacement set	(fixed and moving)		B250
<b>G385</b>	3-pole main contact replacement set	(fixed and moving)		B310
<b>G384</b>	3-pole main contact replacement set	(fixed and moving)		B400
<b>G525</b>	3-pole main contact replacement set	(fixed and moving)		B500
<b>G526</b>	3-pole main contact replacement set	(fixed and moving)		B630