



new

| type | for contactor | description | adjustment range | motor rating AC3 (400V) |
|---|---------------|------------------------|------------------|-------------------------|
| RF38 series (phase failure sensitive) | | | | |
| • Selectable manual or automatic reset | | | | |
| RF380016 | BF09 - 38 | thermal overload relay | 0.10 - 0.16A | — |
| RF380025 | BF09 - 38 | thermal overload relay | 0.16 - 0.25A | 0.06 kW |
| RF380040 | BF09 - 38 | thermal overload relay | 0.25 - 0.40A | 0.09 kW |
| RF380063 | BF09 - 38 | thermal overload relay | 0.40 - 0.63A | 0.12/0.18 kW |
| RF380100 | BF09 - 38 | thermal overload relay | 0.63 - 1.00A | 0.25 kW |
| RF380160 | BF09 - 38 | thermal overload relay | 1.00 - 1.60A | 0.37/0.55 kW |
| RF380250 | BF09 - 38 | thermal overload relay | 1.60 - 2.50A | 0.75 kW |
| RF380400 | BF09 - 38 | thermal overload relay | 2.50 - 4.00A | 1.1/1.5 kW |
| RF380650 | BF09 - 38 | thermal overload relay | 4.00 - 6.50A | 2.2 kW |
| RF381000 | BF09 - 38 | thermal overload relay | 6.30 - 10.0A | 3.0/4.0 kW |
| RF381400 | BF09 - 38 | thermal overload relay | 9.00 - 14.0A | 5.5 kW |
| RF381800 | BF09 - 38 | thermal overload relay | 13.0 - 18.0A | 7.5 kW |
| RF382300 | BF09 - 38 | thermal overload relay | 17.0 - 23.0A | 11 kW |
| RF382500 | BF09 - 38 | thermal overload relay | 20.0 - 25.0A | 11 kW |
| RF383200 | BF09 - 38 | thermal overload relay | 24.0 - 32.0A | 15 kW |
| RF383800 | BF09 - 38 | thermal overload relay | 32.0 - 38.0A | 18.5 kW |
| RF82 series (phase failure sensitive) | | | | |
| RF824200 | BF50 - 80 | thermal overload relay | 28 - 42A | 15 - 18.5 kW |
| RF825000 | BF50 - 80 | thermal overload relay | 35 - 50A | 22 kW |
| RF826500 | BF50 - 80 | thermal overload relay | 46 - 65A | 25 - 30 kW |
| RF828200 | BF50 - 80 | thermal overload relay | 60 - 82A | 33 - 40 kW |
| RF95 series (phase failure sensitive) | | | | |
| RF95395 | BF95 - 110 | thermal overload relay | 70 - 95A | 40 - 45 kW |
| RF953110 | BF95 - 110 | thermal overload relay | 90 - 110A | 55 kW |
| RF200 series (phase failure sensitive) | | | | |
| RF200125 | B115 - 400 | thermal overload relay | 75.0 - 125A | 40/63 kW |
| RF200150 | B115 - 400 | thermal overload relay | 90.0 - 150A | 51/80 kW |
| RF200200 | B115 - 400 | thermal overload relay | 120.0 - 200A | 75/100 kW |
| RF420 series (phase failure sensitive) | | | | |
| RF420250 | B115 - 400 | thermal overload relay | 150.0 - 250A | 92/132 kW |
| RF420300 | B115 - 400 | thermal overload relay | 180.0 - 300A | 100/162 kW |
| RF420420 | B115 - 400 | thermal overload relay | 250.0 - 420A | 129/198 kW |

Accessories

| | | | |
|-----------|---|-------------------------------|-------------|
| G372 | set links for mounting | RF200 overload onto contactor | B115 - B180 |
| G373 | set links for mounting | RF200 overload onto contactor | B250 - B400 |
| G376 | set links for mounting | RF420 overload onto contactor | B250 - B400 |
| RFX3804 | separate mounting adaptor for RF38 | (surface / DIN rail mount) | |
| G270 | separate mounting adaptor for RF95 | (surface / DIN rail mount) | |
| G228/...* | electrical reset mechanism for | RF38 - RF95 | |
| RFX3801 | lead sealing device for overloads | RF38/200/420 | |
| G233 | lead sealing device for overloads | RF38 - 95 | |
| G244 | clip-on electric NO start button | RF38 - 95 | |
| RB6 | overload labelling plate (self marking) | (each) | RF38 - 95 |
| RFX3802 | protection cover for RF38 on contactor assembly | | BF09 - 25 |
| RFX3803 | protection cover for RF38 on contactor assembly | | BF26 - 38 |

1... Specify coil voltage*

