



## Contactor accessories

type description for contactor


### Accessories for contactors BF09-110

	<b>BFX31.01</b>	reversing contactor rigid connecting kit	for contactors	BF09-25
	<b>BFX31.02</b>	reversing contactor connecting kit	for BFX50.01 (interlocking)	BF09-25
	<b>BFX32.01</b>	reversing contactor rigid connecting kit	for contactors	BF26-38
	<b>BFX31.31</b>	line-star-delta rigid connecting kit	for contactors	BF09-25
	<b>BFX32.31</b>	line-star-delta rigid connecting kit	for contactors	BF26-38
	<b>BFX32.32</b>	line-star-delta rigid connecting kit	(line-delta) BF26-38 (star)	BF09-25
	<b>BFX80</b>	sealing cover	for contactors	BF09-38
	<b>BFX89.01</b>	universal screw mounting base	for contactors	BF09-38
	<b>BFX89.02</b>	screw fixing brackets (2pcs)	for contactors	BF09-38
	<b>BA135</b>	2-pole paralleling links	for contactors	BF09-25
	<b>BA235</b>	2-pole paralleling links	for contactors	BF26-38
	<b>BA435</b>	3-pole paralleling links	for contactors	BF50-11
	<b>G231</b>	1-pole enlarged terminal (1-6mm <sup>2</sup> )	for contactors	BF09-25
	<b>G232</b>	1-pole enlarged terminal (1-10mm <sup>2</sup> )	for contactors	BF26-38
	<b>G271</b>	3-pole enlarged terminal (1-50mm <sup>2</sup> )	for contactors	BF50-110
	<b>G285</b>	1-pole auxiliary terminal	for contactors	BF50-110
	<b>BFX30</b>	blank label for self labelling (orange)	for contactors	BF09-38


### Accessories for contactors B115 - B630

	<b>BA1595</b>	3-pole star connecting bar	for contactors	B115-B180
	<b>BA1721</b>	3-pole star connection bar	for contactors	B250-B400
	<b>BA1846</b>	3-pole star connection bar	for contactors	B500-B630
	<b>G371</b>	adaptor for fast-on to screw terminal (coil)		B115-B630

### Surge suppressors for contactors BF09-38 (quick connect)

	<b>BFX77.048</b>	≤ 48 VAC varistor	for contactors	BF09-38A
	<b>BFX77.125</b>	48-125 VAC varistor	for contactors	BF09-38A
	<b>BFX77.240</b>	125-240 VAC varistor	for contactors	BF09-38A
	<b>BFX79.415</b>	240-415 VAC resistor-capacitor	for contactors	BF09-38A

### Spare coils (... specify coil voltage)

	<b>BFX91A/...</b>	AC	spare coil only	for contactors	BF09-25A
	<b>BFX92A/...</b>	AC	spare coil only	for contactors	BF26-38A
	<b>BA705/...</b>	AC	spare coil only	for contactors	BF50-110
	<b>BA911/...</b>	DC	spare coil only	for contactors	BF50-110C
	<b>BA1546/...</b>	AC/DC	spare coil only	for contactor	B115-180
	<b>BA1671/...</b>	AC/DC	spare coil only	for contactor	B250-400
	<b>BA1796/...</b>	AC/DC	spare coil only	for contactor	B500-630

### Spare contact sets (fixed and moving) per 3-pole set

	<b>G274</b>	3-pole main contact replacement set (fixed and moving)			BF50
	<b>G275</b>	3-pole main contact replacement set (fixed and moving)			BF65
	<b>G276</b>	3-pole main contact replacement set (fixed and moving)			BF80
	<b>G475</b>	3-pole main contact replacement set (fixed and moving)			BF95
	<b>G476</b>	3-pole main contact replacement set (fixed and moving)			BF110
	<b>G380</b>	3-pole main contact replacement set (fixed and moving)			B115
	<b>G381</b>	3-pole main contact replacement set (fixed and moving)			B145
	<b>G382</b>	3-pole main contact replacement set (fixed and moving)			B180
	<b>G383</b>	3-pole main contact replacement set (fixed and moving)			B250
	<b>G385</b>	3-pole main contact replacement set (fixed and moving)			B310
	<b>G384</b>	3-pole main contact replacement set (fixed and moving)			B400
	<b>G525</b>	3-pole main contact replacement set (fixed and moving)			B500
	<b>G526</b>	3-pole main contact replacement set (fixed and moving)			B630